



- **MANUAL - DISPLEJ DZ43**
- **CHARGING**

Dear Customer,

Before riding your E-CAFE BIKE for the first time, please read this manual for operating the display, lights and charging.

Thank you and enjoy your ride!

E-CAFE BIKE www.e-cafebike.cz



A handwritten signature in blue ink, appearing to be 'Jan Malina', written over the small logo.

CITY COMMUTERS s.r.o.
IČO: 09016333 DIČ: CZ09016333
Sídlo: Korunní 2569/108, Praha 10
Provozovna: Na Březince 1513/14, Praha 5
www.e-cafebike.com info@ecafebike.com
Jan Malina, jednatel tel: +420 774 947 838

Turning the e-bike on and off

- The e-bike is turned on and off with a key that can be removed in both positions. After turning it on, the daylights will turn on, wait until the display boots from the control unit, then the e-bike is ready to ride.

LCD DISPLAY DZ43 and remote

- DESCRIPTION OF THE SYMBOLS ON THE DISPLAY:



- Remote description:

plus - selection of assistance level
(long press turns on the headlight)

switching the mileage
indicator

blinkers buttons

minus - select assistance level
(long press turns on walk assist)

horn



Warning:

Never connect or disconnect the display from the wiring when the system is turned on!

Protect the display from physical damage and running water.

Do not wash the e-bike with running water, water from a hose, or pressurized water from a hose, as this may damage the electrical and mechanical parts. We recommend washing with a damp cloth and then wiping with a dry cloth.

Assist mode settings

- The remote is equipped with buttons that allow you to set several levels of assistance. Press the + or - button to change the assistance levels. The factory setting is 0 - 5, where 0 means that the system is without motor assistance and 5 means maximum assistance. After turning on the system, the assistance level is 0 by default.

Changing the mileage indicator mode

- To change the mileage indicator mode (ODO, TRIP) on the display, briefly press the M button.
- **Clearing the TRIP**

Turning on the headlights

- Long press the + button to turn on. Long press the + button again to turn off.

Turning on the walk assist

- To activate the walking assistant, hold down the - button. The assistant will be activated after 1 second and will be immediately turned off when the button is released. This function is used to assist when walking and pushing the e-bike. The speed of the e-bike ranges from 4-6 km/h. This mode is indicated on the display in place of the assistance levels.
- **Warning:** This function is only for pushing the bike. Please do not use this function for cycling.

Horn

- Pressing the button activates the warning sound

BATTERY STATUS:

- The battery status indicator shows how much capacity is left in the battery. Five bars mean the battery is fully charged.
- Percentage display of battery capacity.

100 > 80 %

80 > 60 %

60 > 40 %

40 > 20 %

20 > 0 % - charge the battery

ERROR MESSAGES

- If any system error occurs, an error message in the form of a number will be shown on the display.
- **If an error message appears or the motor stops working, contact us immediately and do not attempt to repair the motor in any way.**

BATTERY CHARGING:

- All batteries are equipped with ST-3PIN (or similar) connectors. The chargers have an LED charging indicator, if red the battery is charging, if green the battery is fully charged and will automatically go into maintenance mode.